

## User's Guide for the UF4-200B

4-in-1 Cable TV RemoteControl

### VISIT US ON THE WEB

You can find programming instructions and codes for all of our remote controls, as well as information about our other products on our website:

[www.uselectronics.com](http://www.uselectronics.com)



## 1 BEFORE YOU BEGIN

If you have a TV with a remote control, we recommend that you plug its power cord directly into a wall outlet if available (your cable installer may select an alternate setup).

Make sure to set your TV to channel 2, 3, or 4 as directed by your cable company.

This manual makes reference to "mode keys." These are the **CABLE**, **TV**, **VCR**, and **AUX** keys at the top of the remote control.

## 2 INSTALL BATTERIES

Before you can program or operate the remote control, you must install two AAA Alkaline batteries.

### Step 1:


Remove the battery compartment cover on the back of your remote control.

### Step 2:

Check battery polarity carefully, and install the batteries as shown in the illustration below

### Step 3:

Replace the battery compartment cover.

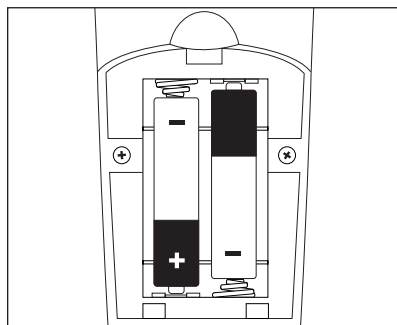

## ! IMPORTANT NOTE

Weak batteries may disrupt normal operation of the remote.

We recommend that you use only AAA alkaline batteries.

## 3 KNOW YOUR REMOTE

The chart below shows the functions of special keys for your cable box and program guide. See the cable box manual for further details.

<b>POWER</b>	turns the current device on and off	<b>NOTE</b> Depending on the configuration of your cable box, certain functions listed here may or may not be functional.
<b>HELP</b>	displays help for the on-screen display	
<b>LOCK</b>	allows restricting viewing of certain programs	
<b>EXIT</b>	exits the on-screen display menus	
<b>INFO</b>	displays channel and program information	
<b>GUIDE</b>	displays the program guide	
<b>MENU</b>	displays the main on-screen display menu	
<b>CURSOR KEYS</b>	navigate through on-screen guides (see the highlighted section above)	
<b>FAV</b>	cycles through your favorite channels	
<b>LAST</b>	recalls the last channel that was viewed	
<b>MUTE</b>	turns volume off	
<b>OK</b>	selects various options and tunes programs from the program guide	
<b>PAGE +/-</b>	pages through on-screen menu and program guide screens	
<b>DAY +/-</b>	moves the program guide one day forward and backward	
<b>TV/VCR</b>	switches between TV and VCR	
<b>MUSIC/ENTER</b>	switches between cable TV and Music Choice™	

US Electronics provides these function descriptions as a general guide to allow you to become more familiar with your cable box. Refer to your cable box manual for descriptions of specific functions.

**!** Note that in the TV and VCR modes, the **PAUSE**, **PLAY**, **REW**, **REC**, and **FF** keys control your VCR. To record a program, press **PLAY** while holding down **REC**. This prevents accidental recording.

## 4 SETTING UP YOUR REMOTE

The UF4-200B is already programmed to control General Instrument DCT1000 set-top terminals. To control another device, look for the list of manufacturers' three-digit codes for the device type in the Television Codes, VCR codes sections, or Converter Codes sections, then perform the following steps.

**1** On the remote control, press and hold the appropriate mode key until the four mode keys flash twice. The mode key will continue to flash.

**2** Enter the three-digit code.

After you press the first digit, the mode key should light and stay on. After you press the last digit, the mode key should flash three times and turn off.

If the mode key does not flash three times before turning off, the code is invalid for this device type. Repeat the procedure with another device code.

**3** Point the remote at the device and press **POWER**. If the device turns on or off, you have finished programming.

If you have tried all the codes listed for the manufacturer and the device does not respond, refer to the CodeScan™ section later in this manual.

**4** Write the codes below

Cable Box code \_\_\_\_ \_\_\_\_ \_\_\_\_ TV code \_\_\_\_ \_\_\_\_ \_\_\_\_

VCR Code \_\_\_\_ \_\_\_\_ \_\_\_\_ Aux. code \_\_\_\_ \_\_\_\_ \_\_\_\_

## 5 SETTING UP YOUR REMOTE FOR AN AUXILLIARY DEVICE

You can program the Aux. mode to control an auxiliary device such as a second remote-controlled TV or VCR, a General Instrument satellite receiver, or a digital audio tuner.

**1** Press and hold **AUX** until the four mode keys flash twice.

Press and release the appropriate mode key for the device (**VCR** for a video cassette recorder, **TV** for a television, and **CABLE** for a cable device) until the four mode keys flash twice.

Look up the device manufacturer in the Television Codes, VCR codes sections, or Converter Codes sections and enter the three-digit code for your TV, VCR or Cable device.

**3** After you press the first digit, the mode key should light and stay on. After you press the last digit, the mode key should flash three times and turn off.

If the **AUX** key does not flash three times before turning off, the code is invalid for this device type. Repeat the procedure with another device code.

**4** Point the remote at the device and press **POWER**. If the device turns on or off, you have finished programming. If you have tried all the codes listed for the manufacturer and the device does not respond, refer to the CodeScan™ section later in this manual.

## 6 PROGRAMMING VOLUME CONTROL

You can program your UF4-200B to control the volume through the TV while in any other mode (the TV must permit remote volume control). For example, you can control volume through the TV while in Cable mode. In VCR mode, the volume control is always through the TV. This procedure does not effect the device codes you set previously.

To control the volume through the TV while in Cable mode:

**1** Press and hold **CABLE** for approximately three seconds until the four mode keys flash twice. The **CABLE** key will continue to flash.

**2** Press **TV**. The **CABLE** key will flash three times and turn off. You now control the volume through the TV whenever you change the volume level in Cable mode.

## 7 MASTER POWER CONTROL

You can program your UF4-200B to turn on and off all of your remote-controlled devices (Cable box, TV, VCR, and and auxiliary device) when you press **POWER**. All devices must be in direct line of sight to ensure proper operation.

Perform the following steps to enable or disable power control for each device:

**1** Make sure all devices to be controlled are turned on.

**2** Press any mode key (**CABLE**, **TV**, **VCR**, and **AUX**) for approximately three seconds until all four mode keys flash twice. The mode key your press will continue to flash.

**3** Press **POWER** twice. The mode key will flash three times and turn off.

# 8 TELEVISION CODES

Admiral	034	Etron	032
Akai	032 • 070	Fisher	042 • 090
Alba	113	Formenti	111
A-Mark	120	Fortress	105
Amstrad	033	Fujitsu	034 • 194
Anam	041 • 120 • 121	Funai	034 • 041 • 194
AOC	005 • 006 • 019 • 020 • 195	Futuretech	041 • 194
Archer	120	GE	003 • 008 • 009 • 015 • 040
Audiovox	120		143 • 044 • 130 • 190 • 195
Admiral	034	Genexxa	113
Bauer	111	Goldstar	005 • 023 • 026 • 045
Becrese	see Hitachi		046 • 088 • 195
Brockwood	195	Gradiente	211
Candle	006 • 022 • 023 • 195	Granada	195
Capehart	019 • 195	Grand	195
Circuit City	195	Grundig	047
Citizen	006 • 016 • 022 • 023	Hallmark	195
	024 • 025 • 026	Hinari	034
Colortyme	195	Hitachi	023 • 026 • 048 • 049 • 050
Concerto	023		051 • 052 • 053 • 054 • 055
Contec	027 • 028 • 041 • 091		126 • 202 • 213
Craig	021 • 041 • 194	Infinity	026
Curtis Mathes	006 • 203 • 016	JBL	026
CXC	041	Jensen	056
Daewoo	005 • 024 • 026 • 029	JVC	057 • 058 • 059 • 060
	030 • 031 • 032 • 219	Kenwood	006
Daytron	026 • 195	Kloss	022 • 110
Dixi	032 • 088 • 120	KTV	026 • 039 • 040 • 041
Dumont	195	Kwasho	061
Electrohome	026 • 195 • 209 • 213	Linitron	see Sharp
Elta	032	Lloyd	195
Emerson	026 • 027 • 028 • 033 • 034 • 035	Lloytron	026
	037 • 038 • 039 • 040 • 041 • 122	Loewe	088
	195 • 220 • 999	Logik	018
Envision	006	Luxman	023
EON	see NEC	LXI	003 • 023 • 026 • 090 • 095 • 117 • 125

# 9 VCR CODES

Action	140	Emerson	005 • 006 • 007 • 008 • 009 • 010	Logik	089
Advantz	141		011 • 047 • 059 • 067 • 088 • 090	LXI	088 • 200
Adventura	088		160 • 163 • 164 • 200	Magnavox	027 • 033 • 054 • 065 • 144 • 180
Aiko	047	Fisher	164	Marantz	030
Aiwa	088 • 122 • 123 • 124	Funai	088 • 149	Marta	200
Akai	016 • 060 • 150 • 181	Garrard	149	Matsushita	054
American	054	GE	028 • 051 • 054	MEI	054
Audiovox	200	Goldstar	030 • 193 • 200 • 202	Memorex	033 • 054 • 066 • 081 • 082
Broksonic	008 • 010 • 059 • 148	Go Video	057 • 058 • 120		083 • 085 • 088 • 200
Calix	200	Gradiente	175	MGA	067
Canon	054 • 207	Grundig	176	Minolta	037 • 177
Capehart	046	Harley Davidson	088	Mitsubishi	062 • 067 • 070 • 181 • 194
Carver	065	Harman Kardon	030	Motorola	054 • 085
CCE	047 • 089	Harwood	011 • 089	Multitech	089
Citizen	047 • 200	Headquarter	081	NEC	030 • 031 • 032 • 060 • 062 • 197
Colt	089	HI-Q	082	Nikko	200
Craig	044 • 082 • 089 • 200	Hitachi	032 • 037 • 040 • 041	Olympus	054 • 080 • 128
Curtis Mathes	051 • 054 • 060		060 • 118 • 177	Optimus	085 • 200 • 205
Cybernex	079	Jensen	060	Optonica	254
Daewoo	034 • 046 • 047 • 126 • 127	JVC	060 • 061 • 062 • 063 • 064 • 179	Orion	009 • 129
Daytron	046	Kenwood	030 • 060 • 062 • 179	Panasonic	023 • 054 • 080 • 114 • 128 • 142
Dynatech	088	KLH	089		201 • 207 • 209 • 214 • 216 • 219
Electrohome	200	Kodak	054 • 200	Penney	030 • 037 • 048 • 054 • 197 • 200
Electrohome	200	Lloyd	088	Pentax	037 • 177
Emerex	000	Lloyd's	160	Philco	054

Magnavox	006 • 020 • 024 • 025 • 026 • 027	NAD	002 • 117 • 195	Technics	008
	066 • 068 • 069 • 110 • 210	Quasar	008 • 009 • 075	Techwood	023
Marantz	006 • 028 • 088	Radio shack	026 • 041 • 107 • 112	Teknika	004 • 005 • 016 • 018 • 022
Matsui	018	RCA	003 • 005 • 014 • 015 • 048 • 079 • 080		023 • 024 • 025 • 026 • 034
Megatron	195		081 • 082 • 083 • 084 • 085	Teleavia	041 • 114 • 115
Logik	018		086 • 087 • 125 • 133 • 134	Telefunken	051
Memorex	018 • 032 • 090 • 195	Realistic	090	Teletch	032
Mitsubishi	004 • 005 • 070 • 071	Saba	051	Tera	013
	072 • 123 • 195 • 207	Saisho	032 • 033 • 109	Thomas	195
MTC	005 • 006 • 016 • 023 • 031 • 195	Sampo	006 • 109	Thomson	051
NAD	002 • 117 • 195	Samsung	005 • 006 • 016 • 023 • 026 • 032	Thomson-Projector	051 • 116
National	197		088 • 112 • 195 • 204 • 221	TMK	023 • 195
NEC	005 • 006 • 007 • 017 • 023 • 127	Sanyo	042 • 089 • 090 • 091 • 109	Toshiba	016 • 090 • 096 • 117 • 118 • 131
Nikkai	112 • 113 • 118	SBR	088	Tosonic	028
Nikko	195	Schneider	088	Totevision	026
Nordmende	051 • 217	Scott	026 • 034 • 037 • 041 • 093	Toyomenko	195
Onwa	041	Sears	003 • 023 • 034 • 042 • 089 • 090	Universal	043 • 190
Optonica	105 • 107		094 • 095 • 096 • 097 • 099 • 100	Vector Research	006
Orion	194	Sharp	101 • 102 • 103 • 104 • 117 • 195	Victor	057
Osaki	112		107 • 108 • 128 • 129	Video Concepts	070
Osume	091	Siemens	091	Vidtech	005 • 195
Panasonic	008 • 009 • 010 • 011 • 012	Signature	118	Viking	022
	026 • 074 • 075 • 197 • 200 • 206	Solavox	112	Wards	005 • 006 • 015 • 018 • 024
PEC	see Toshiba	Sony	000 • 109 • 119 • 122		025 • 027 • 034 • 043 • 066
Penney	003 • 005 • 006 • 014	Soundesign	025 • 041 • 195	White-Westinghouse	219
	016 • 026 • 043 • 096	Spectricon	020 • 120	Yamaha	005 • 006
Performance	See Sony	Squareview	194	York	195
Philco	005 • 006 • 024 • 025 • 068 • 110	SSS	005 • 041	Zenith	001 • 018
Philips	026 • 088	Supra	023	Zonda	120
Pioneer	002 • 048 • 051 • 076	Supre-Macy	022		
Portland	005 • 026	Sylvania	006 • 024 • 025 • 026		
Prima	see Curtis Mathes		068 • 110 • 111		
Proscan	027 • 125	Symphonic	132 • 194		
Proton	013 • 019 • 026 • 035 • 124 • 195	Tandy	105 • 113		
Pulsar	001	Tatung	009		
Pulser	see Daewoo and Goldstar				

# 10 CABLE AND AUXILLIARY CODES

Digital Music Express	006	GI Sat. Mode 1	010
GI CFT2200/DCT1000	000	GI Sat. Mode 2	011
GI CFT2000 Series	001	GI Sat. Mode 3	012
GI DCR2000/3000	007	GI STARCOM Series	002
GI DCR4000	005	GI/Tocom	003 • 004
GI Sat. Mode 0	009	Primestar Mode 0	009

# 11 CODESCAN™

If none of the codes listed for your Cable Box, TV, or VCR works, the CodeScan™ method will allow you to cycle through all the available codes in the remote until you find the right Cable Box, TV, or VCR code.

## step 1

Manually turn ON power to the device you want to program the remote for (Cable Box, TV, or VCR).


## step 2

Press and hold a mode key for approximately three seconds until the four mode keys flash twice. The selected mode key will continue to flash.

Press POWER. The mode key will stop flashing and remain on.

## step 3

The Cursor Up Key

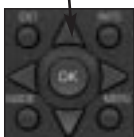

Point the remote control at the device. Press and release the CURSOR UP key repeatedly and slowly. Each time you press the key, the remote sends the power-off command using a different device code. When the device turns off, the remote is programmed with a code that controls the device.

If you press the CURSOR UP key after the device has turned off, press the CURSOR DOWN key to return to the previous device code.

Test whether other functions operate using the remote control. If a primary function does not work, continue to press the CURSOR UP key to find another code that turns off the device. Then test the functions again.

When you are satisfied that all primary functions are working, press OK to lock in the code.

# 12 RECALLING A DEVICE CODE

Perform the following steps to read the code currently set for a device. This is useful for retrieving a device code that was set using the CodeScan™ method.

- 1 Press a mode key until the four mode keys flash twice.
- 2 Press **HELP**. The mode key flashes each of the three digits in the code. A pause separates each digit. For example, three flashes represent the number 3. Rapid flashing represents 0.
- 3 Count and record the sequence of flashes to determine the three-digit code.