 


**User's Guide
for the**

**UY4DIGI
UY4DIGI-P
UY4DIGI-S**

**4-in-1 Remote Control
featuring Memory Lock™**

www.uselectronics.com

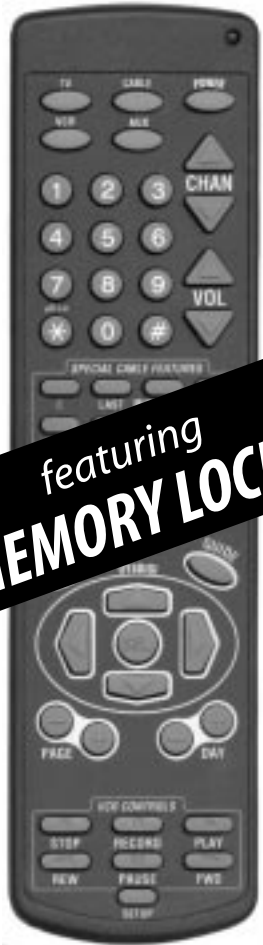

**featuring
MEMORY LOCK™**

before you begin

If you have a TV with a remote control, we recommend that you plug its power cord directly into a wall outlet if available (your cable installer may select an alternate setup).

Make sure to set your TV to channel 2, 3, or 4 as directed by your cable company.

I N F O **Memory Lock™** is an exclusive technology that saves the device codes that are programmed into the remote, even when the batteries are removed.

installing batteries

Before you can program or operate the remote control, you must install two AAA Alkaline batteries.

Step 1


Remove the battery compartment cover on the back of your remote control.

Step 2:

Check battery polarity carefully, and install the batteries as shown in the illustration below.

Step 3:

Replace the battery compartment cover.

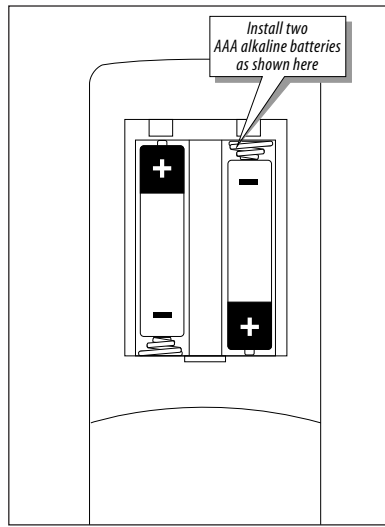

button functions

cable box function keys

See the chart below for a description of the key functions.

device/number keys

- Device keys select what device the buttons on the remote will operate.
- Number keys allow you to enter the channel you want to view. You will also use them to setup the remote.

vcr controls

These keys operate standard VCR functions. **Operating Note:** Press the [RECORD] button (or the [EPG RECORD] button) twice to start recording on your VCR.

The chart below shows the functions of special keys for your cable box and program guide. See the cable box manual for further details.

* (HELP)	displays help for the on-screen display	NOTE Depending on the configuration of your cable box, certain functions listed here may or may not be functional.
# (FAV)	cycles through your favorite channels	
A/THEME	future use	
LAST	recalls the last channel that was viewed	
MUSIC/ENTER	switches between cable TV and Music Choice™	
MUTE	turns volume off	
B/LIST	future use	
EXIT	exits the on-screen display menus	
PPV	displays pay-per-view options	
SWITCH	switches between cable inputs on a dual-cable system	
C/CANCEL	future use	
INFO	displays channel and program information	
MENU	displays the main on-screen display menu	
GUIDE	displays the program guide	
SEL	selects various options and tunes programs from the program guide	
CURSOR KEYS	navigate through on-screen guides (see the highlighted section above)	
PAGE +/-	pages through on-screen menu and program guide screens	
DAY +/-	moves the program guide one day forward and backward	

US Electronics provides these function descriptions as a general guide to allow you to become more familiar with your cable box. Refer to your cable box manual for descriptions of specific functions.

setting up your remote control

Before you get started, find the red buttons labelled [VCR], [TV], and [CABLE] at the top of the remote control. In this section we'll refer to each of these buttons as a [DEVICE] buttons. Each time you see [DEVICE] button in the in this section, press the appropriate button for the device that will be operated by the remote (TV, VCR, Cable Box, etc.). Next, find the [SETUP] button at the bottom of the remote control. Once you are familiar with the location of the buttons, continue below.

1. for your VCR, TV, and cable box

Press the [DEVICE] button, then the [SETUP] button on the remote.

Enter the 3-digit device code for your brand of device listed in the charts on the other side of this manual by pressing the appropriate buttons on the numeric key pad.

Press the [SETUP] button again to save the code. The red indicator light at the upper right-hand corner of your remote will flash 3 times if these steps were followed correctly.

Press the [POWER] button to test the code you've entered. The device should turn ON or OFF each time the [POWER] button is pressed. If the device doesn't turn ON and OFF, repeat this setup procedure with the next code listed for the device.

2. for a digital music terminal (optional)

Press the [AUX] button, then the [SETUP] button on the remote.

Enter the 3-digit device code for your type of digital music terminal by pressing the appropriate buttons on the numeric key pad.

Jerrold DCR1000000
Scientific-Atlanta DMX002

Press the [SETUP] button again to save the code. The red indicator light at the upper right-hand corner of your remote will flash 3 times if these steps were followed correctly.

Press the [AUX] button again to test the code you've entered. The device should turn ON or OFF each time the [POWER] button is pressed. If the device doesn't turn ON and OFF, repeat this setup procedure with the next code listed for the device.

3. for an auxilliary device (optional)

The red [AUX] button allows you to control a or a second TV or VCR if you aren't using it for a digital music terminal. To do this, you need to setup the [AUX] button so it functions like a second [TV] or [VCR] button.

Press the [SETUP] button, then the [MENU] button on the remote.

Now, press the [AUX] button, and then the button that you want the [AUX] button to emulate (either the [TV] or [VCR] button), then press the [SETUP] button. The red indicator light at the upper right-hand corner of your remote will flash 3 times if these steps were followed correctly.

The [AUX] button can now be programmed to control the specific device. Follow the instructions above in step 1 and press the [AUX] button any time you are told to press the [DEVICE] button.

Helpful Hint	The setup code for Jerrold /GI/Motorola DCT digital converters and CFT2200™ series cable boxes is 002
---------------------	--

cable box code


The setup code for the GI/Jerrold™ DCT1000 and CFT2200™ series cable boxes is:

002

Jerrold™ is a trademark of GIC corp.

helpful hint

Once you have found your TV, VCR, and Cable Box codes, write them down for safe keeping on the code sticker that's *inside* the battery cover (see illustration below). Attach the "Quick Programming Instructions" sticker to the outside of the battery cover.

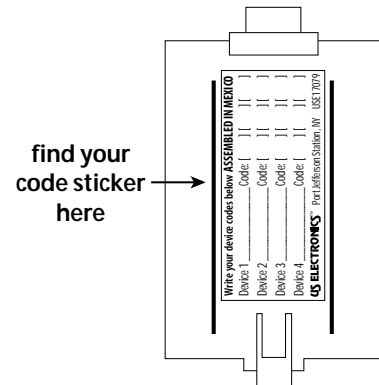

notes

television codes

If your TV is made by one of the manufacturers listed to the right, try that code first. Otherwise, find your code in the chart below.

GE	003	JVC	009	Magnavox	006	Mitsubishi	007
NEC	010	Panasonic	002	Philips	006	Pioneer	008
Proscan	003	RCA	003	Sony	005	Zenith	004

AOC	010 019	GE	025 033 035	Mitsubishi Monitor	016	Sharp	028 046 057 066
Candle	010 031 036 081	Goldstar	012 019 036	MTC	010 019 036 037	Sony	005 015 042
Capehart	034	Harman Kardon	043	NEC	010 019 036 068	Soundesign	019 079
Citizen	010 027 031 036 037 045 079	Hitachi	029 038 047 049 053 056 070 083	Panasonic	002 006 033 035 065	SSS	019 075
Concerto	031	Infinity	006	Penney	001 003 010 019 021 055	Sylvania	006 010 020 022 024 038 079 080
Conklin	000	JBL	006	Philco	006 010 019 020 022 024 079 080	Tatung	032
Contec	028 062 075 078	Jensen	032	Philips	006	Techwood	036
Craig	064 075	JVC	009 063	Pioneer	008 069	Teknika	007 018 019 027 031 036 037 043 071 074 075 079
Curtis Mathes	010 037 075	Kloss Novabeam	022	Proscan	003	TMK	019 036
Daewoo	019 027 039 040 045	KTV	075	Proton	019 026 034	Toshiba	054 058
Dixi	011	Logik	018	Quasar	034 035 081	Universal	021 023
Dynatech	031	Luxman	036	Radio shack	027 066 075	Vidtech	019
Emerson	000 019 074 075 076 078 085	LXI	054	RCA	001 003 019 029	Wards	006 010 018 019 020 021 023 024 066 074 080
Envision	010	Marantz	010	Sampo	010 034	Yamaha	019
Fisher	058	Magnavox	006 010 017 022 024 046 079 080	Samsung	010 019 027 036 037	Zenith	004
Funai	074 075	MGA	007 010 019 059	Sanyo	051 055 060 084		
GE	003 021 023	Mitsubishi	007 016 019 028 050 059	Scott	074		
				Sears	017 054 055 058 067 074		

vcr codes

If your VCR is made by one of the manufacturers listed to the right, try that code first. Otherwise, find your code in the chart below.

GE	001	Hitachi	006	JVC	040	Magnavox	008
Mitsubishi	010	Panasonic	001	NEC	023	Proscan	007
RCA	007	Sony	018	Toshiba	009	Zenith	004

Akai	026 030 034 049	Grundig	008	Pentax	006 038	Sylvania	001 010
Alba	016	Harman Kardon	023 043	Philco	001	Symphonic	005
Altec	004	Hitachi	005 006 026	Philips	008	Tatung	026
Amstrad	005	ITT	026 049	Pioneer	036 040	Teac	005 026
ASA	008 022	JCL	001	Portland	016	Teknika	001 005 022 033
Broksonic	061	Jensen	026	Proscan	007	Telefunken	026
Canon	001	JVC	013 026 040	Quasar	001 047	Thomson	026
Craig	028 063	Kenwood	026 027 040	RCA	001 002 006 007	Thorn	026
Curtis Mathes	001	Lloyd	005	Realistic	001 005 022 027 028 029 048 063	TMK	021
Daewoo	009 015 016 045	Magnavox	001 008	Saba	026	Toshiba	009 010 026
Daytron	016	Marantz	001 008 023	Saisho	046 058	Totevision	022 063
Dual	026	Marta	022	Salora	010	Uni-Logic	000
Dynatech	005 029	MEI	001	Samsung	009 032 063	Unitech	063
Emerson	005 021 020 037 041 046 050 057 058 060 061	MGA	010 037	Sansui	026 040	Vector Research	023
Ferguson	026	Minolta	006	Sanyo	027 028	Video Concepts	023
Finlux	005 008	Mitsubishi	010 037 062	Schaub Lorenz	026	Videosonic	063
Fisher	028 035 039	MTC	005 063	Scott	009 061	Wards	005 029 063
Funai	005	Multitech	005 042	Sharp	029	Yamaha	023 026
GE	001 007	NEC	023 026 031 040	Shintom	042	Zenith	018 019 024
Goldstar	022 023	Normende	026	Sony	014 017 018 019		
Graetz	026	Panasonic	001 003				
		Penney	001 006 023				

troubleshooting guide

? Problem

I programmed the remote, but it won't work my TV, VCR, or Cable Box.

😊 Solution

You may have entered the wrong code (or the correct code might not be listed). Try entering all of the device manufacturer's codes again, starting with the manufacturer's popular code if one is available.

If you are still unable to operate your device, follow the instructions in the section titled **CodeScan™**.

Weak batteries may cause the remote to only operate one device. If this happens, simply replace them with **NEW** alkaline batteries and reprogram the remote. If you are sure the batteries are good, try rolling them with your finger to ensure a good connection.

? Problem

My remote control doesn't operate my combination TV/VCR.

😊 Solution

Most combination TV/VCRs have VCR tuners in them. You will need to select a code from the VCR section that will power up your TV/VCR. If this is the case, you probably won't need to use a TV code. Also, to control volume with your remote control, you must program the remote for the cable box last.

CodeScan™

If none of the codes listed for your Cable Box, TV, or VCR works, the CodeScan™ method will allow you to cycle through all the available codes in the remote until you find the right Cable Box, TV, or VCR code.

step 1

Manually turn ON power to the device you want to program the remote for (Cable Box, TV, or VCR).

step 2

the right arrow key



Point the remote control at the device, and press the following keys:

[the device button](the red buttons at the top of the remote), **[SETUP]**, **[the right arrow key]**, then the **[POWER]** button.

If the device is still ON, continue at step 3 below. If it turns OFF, press **[SETUP]** again to store the code you just selected, and you're all done. The red indicator light at the upper right-hand corner of your remote will flash 3 times if these steps were followed correctly.

step 3

Press **[the right arrow key]**, then the **[POWER]** button until the device turns OFF. When the device turns OFF, press **[SETUP]** to save the code.

Please be patient — there are about 90 possible codes.